

# ANALOGUE LINK SETUP

SET THE VOLUME TO 0 dB

VOLUME: 0.0 dB  
ANA | FLAT | FLAT | S1

SET THE ANALOGUE SENSITIVITY TO MATCH THE OUTPUT LEVEL OF THE MIXING CONSOLE.  
IF THE OUTPUT LEVEL IS UNKNOWN, USE +21 dBu

AnalogFS: +21 dBu  
ANA | FLAT | FLAT | S1

IF NECESSARY, BALANCE THE OUTPUT LEVEL OF THE SPEAKERS BY ADJUSTING THE SPEAKER LEVEL TO THE APPROPRIATE VALUE

Level: 0.0 dB  
ANA | FLAT | FLAT | S1

IF THE NETWORK IS USED FOR CONTROL, SELECT THE APPROPRIATE SPEAKER LOCATION (FRONT LEFT, FRONT RIGHT, ...)

ID: 1.FRONT LEFT  
ANA | FLAT | FLAT | S1

# DIGITAL LINK SETUP

SET THE VOLUME TO 0 dB

VOLUME: 0.0 dB  
ANA | FLAT | FLAT | S1

SELECT THE DESIRED DIGITAL CHANNEL: A (LEFT) or B (RIGHT)

Digital Ch.: A(L)  
ANA | FLAT | FLAT | S1

IF NECESSARY, BALANCE THE OUTPUT LEVEL OF THE SPEAKERS BY ADJUSTING THE SPEAKER LEVEL TO THE APPROPRIATE VALUE

Level: 0.0 dB  
ANA | FLAT | FLAT | S1

IF THE NETWORK IS USED FOR CONTROL, SELECT THE APPROPRIATE SPEAKER LOCATION (FRONT LEFT, FRONT RIGHT, ...)

ID: 1.FRONT LEFT  
ANA | FLAT | FLAT | S1